

Please make sure to read the Ninja Owner's Guide prior to using your unit.




IGNITION TIPS AND TRICKS

BEFORE IGNITING

- 1 Refer to the Owner's Guide for installation of the battery and propane tank.
- 2 Ensure nothing but the included ceramic rocks are in the bowl at the top of the fire pit.
- 3 Turn on gas supply by slowly opening tank valve completely.
- 4 Close the door.


IGNITION STEPS

- 1 Press the dial in at the OFF position and turn it counterclockwise to the IGNITE position shown in the illustration.

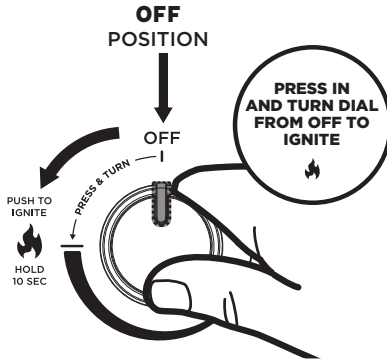

IMPORTANT

- 2 Firmly push the dial in all the way at IGNITE and hold for 10 seconds to ignite the burner. You will hear a clicking sound as a spark is produced.

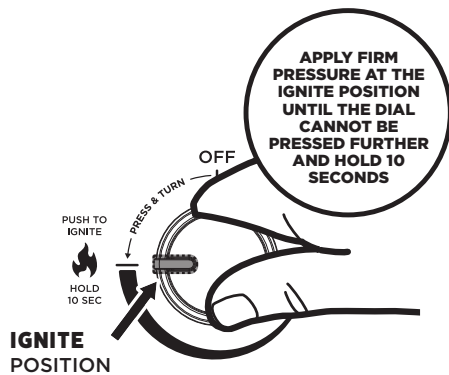

- 3 After 10 seconds, release the dial and adjust the flame height to your liking.
- 4 After use, ensure dial is turned to the OFF position and gas is shut off at the tank valve.

TROUBLESHOOTING

If you are seeing a flame, but it goes out when you release the dial, ensure that you are pushing the dial in as far as it goes at IGNITE and holding for 10 seconds to prime the thermopile.

If you are having trouble igniting and not seeing a flame, check that the battery is installed and that the gas is connected properly.

For additional support, please visit our website for additional tips and tricks or contact 1-800-365-0135.

SharkNinja Operating LLC
89 A Street, Suite 100
Needham, MA 02494
1-800-365-0135
ninjakitchen.com

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

FIRESIDE360 and NINJA are trademarks of SharkNinja Operating LLC.

This product may be covered by one or more U.S. patents. See sharkninja.com/patents for more information.

© 2025 SharkNinja Operating LLC

OF100_Series_INSRT_Dial_MP_Mv7



@ninjakitchen